

## 1.1 Installation of Philips Android e.g. xxBDL4050D

### 1.1.1 How to do a “Factory Reset”

1. TV has to be powered on
2. Enter the Configuration menu. <Home-1-8-8-8>
3. Select Settings
4. Select System Tools – Factory Reset
5. Do a normal installation of the screen

## 1.2 Initial Installation

### 1.2.1 USB flash drive

1. Download AndroidDS.apk from: <http://a.dsig.tv/>
2. Copy AndroidDS.apk to the USB-stick.

### 1.2.2 Screen settings

1. Power On TV
  2. Select Language.
  3. Select network connection
    - a. Ethernet
      - i. Connect the Ethernet cable.
    - b. Wifi:
      - i. Select Wifi and press Next
      - ii. Select SSID
      - iii. Enter the password
      - iv. Connect to the network
      - v. Skip loading configurations from USB or SD.
      - vi. Select Finish
  4. Enter the Configuration Menu <Home-1-8-8-8>
  5. Connect a USB-stick with the AndroidDS.apk to the screen.
  6. Select Apps
  7. Select mnt/usb\_storage
  8. Select the AndroidDS.apk
  9. Select install
  10. After installation, select done and go back to the Configuration Menu.
  11. Select Settings
  12. Select Signage Display
  13. Select Custom app
  14. Click Select App, choose Digital Signage and save
  15. Go back to Settings
  16. Select Date & Time and Select time zone.
  17. Exit the menu
- The install code is now showing. Follow 2.4.2 to complete the installation.

## 1.2.3 General Settings

### Power Settings:

Select Home – Advanced Settings -Power save – Mode 4

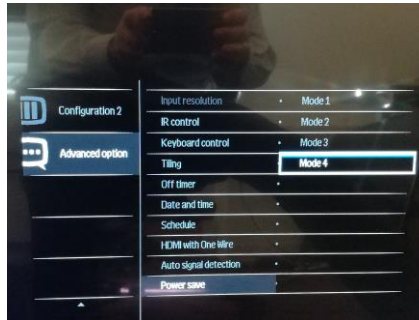


Figure 1: Power save settings

### Remove Logo:

Select Home – Configuration 2 –Setting – Off

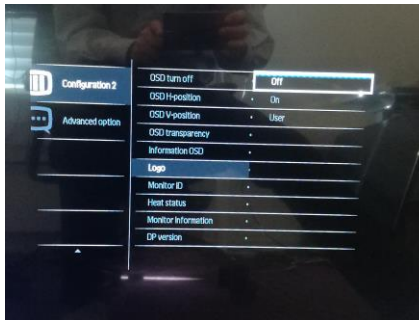 


Figure 2: Logo settings