

## 1.1 Initial Installation of LG 10SM3TB

### 1.1.1 Download and install

1. Download the APK to your android screen and install
  - a. Open the browser on the display
  - b. Download **AndroidDS.apk** from: <http://a.dsig.tv/>
  - c. Enable installation from unknown source
    - i. Settings > Security > Unknown source
  - d. Go to Downloads on your screen and run AndroidDS.apk to install Digital Signage.

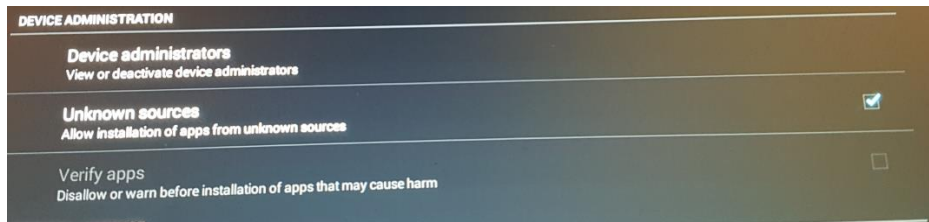


Figure 1: Enable installation from unknown source

### 1.1.2 Screen settings

1. Select Settings > Date & Time and Select time zone.
2. Setup LG Kiosk App.
  - a. Run the LGKioskMode app.
  - b. Select Default App.
  - c. Select the Digital Signage app
  - d. Select Save & Reboot to apply what you changed.
  - e. After the device reboots, the signage app will load

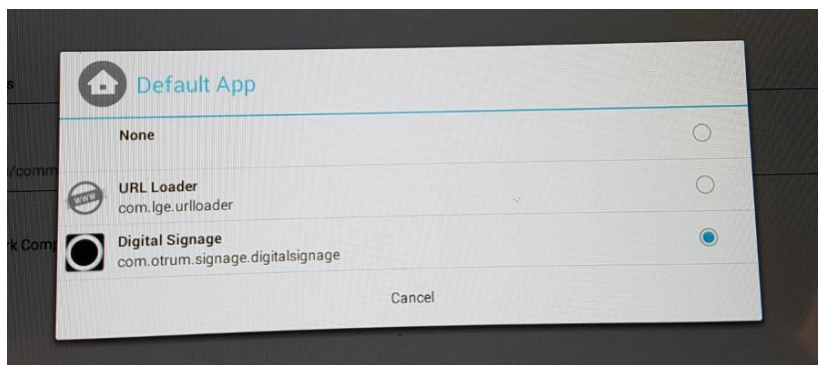


Figure 2: Select Default application

3. The install code is now showing.

## 1.2 Internet connection

### 1.2.1 Ethernet

Use the LAN port to connect the screen to your network.


### 1.2.2 WiFi

1. Select Settings.
2. Select WiFi settings
3. Select SSID
4. Enter the password
5. Connect to the SSID.

## 1.3 Factory Reset

1. Select Settings
2. Select Reset – Factory data reset
3. Do a normal installation of the screen

## 1.4 How to deactivate LG Kiosk Mode

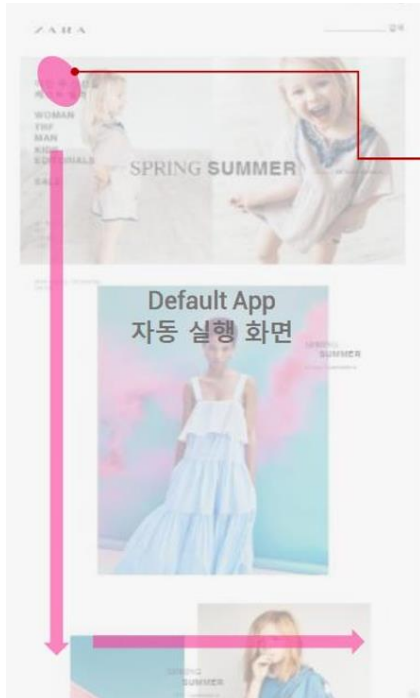

In kiosk mode, the notification & soft key buttons are hidden. To show the soft key bar, you should scrub the screen with "L" pattern carefully like the figure 4. This "L" pattern works like password to get into the android home menu. And also whenever the kiosk default app is running, this immersive full screen and touch block function will work. To exit, you should scrub the "L" pattern.

Figure 3: "L" pattern to show the soft key bar