

1.1 Installation of Philips 10BDL3051T:

1.1.1 USB flash drive

1. Download AndroidDS.apk from: <http://a.dsig.tv/>
2. Copy AndroidDS.apk to the USB-stick.

1.1.2 Screen settings

1. Power On TV
2. Select Language.
3. Select network connection
 - a. Ethernet
 - i. Connect the Ethernet cable.
 - b. Wifi:
 - i. Select Wifi and press Next
 - ii. Select SSID
 - iii. Enter the password
 - iv. Connect to the network
 - v. Skip Signage Display settings.
 - vi. Skip loading configurations from USB or SD.
 - vii. Select Finish
4. Enter the Configuration Menu. "Stop key, then Volume down key. Stop and volume keys are located on the back side of the screen. See figure 1.



Figure 1: Backside of screen

5. Enter pincode. Default pin is: 1234.
6. Select Settings
7. Select Signage Display
8. Select "Change Administrator Password"
9. Enter old pin code. >1234.>
10. Enter new pincode <1111>
11. Exit to Configuration Menu.
12. Connect a USB-stick with the AndroidDS.apk to the screen.
13. Select Apps
14. Select File Manager

15. Open mnt/
 16. Open usb_storage'
 17. Open USB_DISK1
 18. Open the AndroidDS.apk
 19. Select install
 20. After installation, select done and go back to the Configuration Menu.
 21. Select Settings
 22. Select Signage Display
 23. Select Custom app
 24. Click Select App, choose Digital Signage and save
 25. Return to Signage Display
 26. Select "Boot on source"
 27. Select Input
 28. Select "Custom app"
 29. Select Date & Time and Select time zone.
 30. Exit the menu
- The install code is now showing. Follow **Error! Reference source not found.** to complete the installation.